



quick tips for
using **EASYPAR**

**SELECTING PLAYER,
PLAYER COLOR, STARTING HOLE**

TO SELECT PLAYER:
touch black down arrow. ▼
Then touch name.

TO SELECT COLOR:
Touch players name, then touch color choice.

TO SELECT HOLE:
touch forward or back arrow,
or down arrow ▼ for quick hole selection.

ESTABLISHING YARDS/METERS

Player must select their name.

Then touch **Mark GPS** at
each tee-box.

After each shot, select player's name.

Player must be parallel to their ball.

Then touch **Mark GPS** to receive
the distance to middle of green.

SCORING AND SCORECARD

TO ENTER SCORE:
Touch forward or back arrow, or
down arrow for quick score. ▼

TO VIEW SCORE:
Touch players name, then touch score card.
Touch "ok" to go back to player's main page.

ADDITIONAL TIPS

Only use a tee to touch the screen,
never with a pencil.

Sleep mode sets in after 1-minute of
non-use, touch screen to refresh.

EASYPAR quicktips.

Cut out, fold and keep with your **EASYPAR** unit.